



# Premium Security Fittings Wide & Narrow

Escutcheon plate with self-adjusting cylinder core protection Fixed Revolving Sprung

EN 1906, SK 3

## Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

### Use

Exterior doors



**The Self-adjusting Cylinder Core Protection automatically adjusts to the overlap length of the Euro profile cylinder.**



**This product is suitable for 38mm to 67mm thick doors. Contact your supplier for other door thicknesses (for alternative bolts).**

### Installation tools (recommended):

(Battery) drill, screwdriver,  $\varnothing 8$  and  $\varnothing 13$  mm bits, pricker/pencil

## Installation manual

- 1 Install the lock and the Euro profile cylinder (figure **A**).
- 2 Place the drilling template over the Euro profile cylinder (figure **B**).
- 3 Push the spindle through the drilling template via the knob hole in the lock (figure **B**).
- 4 Prick through the drill markings with a pricker (figure **B**).
- 5 Repeat actions 2, 3 and 4 on the other side of the door.
- 6 Remove the drilling template and dismantle the Euro profile cylinder and the lock.
- 7 Drill through the markings on the outside of the door with a  $\varnothing 13$  mm drill until you reach the lock case. Drill through the markings on the inside of the door with a  $\varnothing 8$  mm drill until you reach the lock case.
- 8 Attach the lock and the profile cylinder to the door again.



**The Euro profile cylinder may protrude from the security escutcheon on the outside by between 9 mm and 15 mm**

### Fixed Pusher/Wing Security Fittings (figure **C**)

- 9<sup>A</sup> Screw handle stud (1) into the tapped hole of escutcheon plate (2).
- 10<sup>A</sup> Place the pusher escutcheon plate with pre-mounted outer seal (9) on the outside of the door.
- 11<sup>A</sup> Attach the inner escutcheon plate (3) including inner seal (10) with the supplied bolts (4) to the outer escutcheon plate.

### Operable Handle/Wing Security Fittings (figure **D**)

- 9<sup>B</sup> Place the outer escutcheon plate (5) with pre-mounted outer seal (9) on the outside of the door.
- 10<sup>B</sup> Place the handle stud (6) in the handle of the outer escutcheon plate.
- 11<sup>B</sup> Attach the inner escutcheon plate (7) including inner seal (10) with the supplied bolts (4) to the outer escutcheon plate.

