37-251.2 (01-11)

Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com



AXA HOME/SECURITY

EN


Security rim lock 3016

SKG®

POLITIE KEURMERK VEILIG WONEN

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

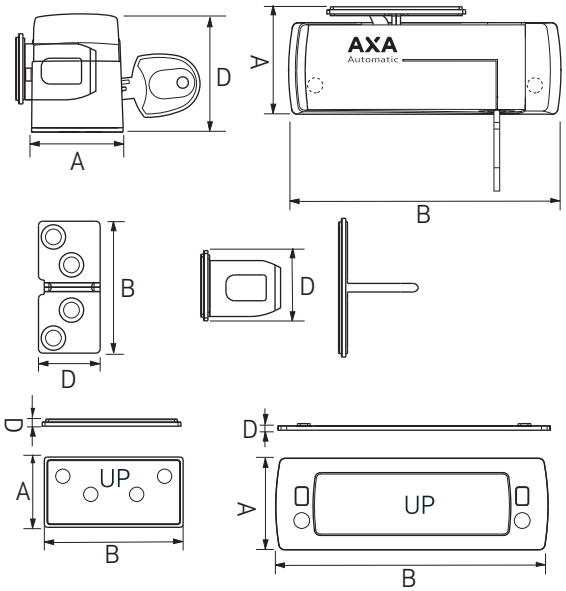

Application
Outward opening windows

Note: Not suitable for casement windows with a width of less than 325 mm or for hopper/awning windows with a height of less than 325 mm. In humid environments or coastal areas, the use of stainless steel screws is recommended.


Note: Do not use on doors; the lock closes automatically!


Installation tools (recommended)
Tape measure, (battery) drill, screwdriver, drill Ø 2,5, 3 and/or 3,5 mm, bradawl/pencil.

Recommended screws: 4,5 x 40 mm and 5,0 x 60 mm


Screw thickness	Pre-drilling softwood	Pre-drilling hardwood
4,5 mm	Ø 3,0 mm	Ø 3,0 mm
5,0 mm	Ø 3,0 mm	Ø 3,5 mm

Mounting position
Left, right or below

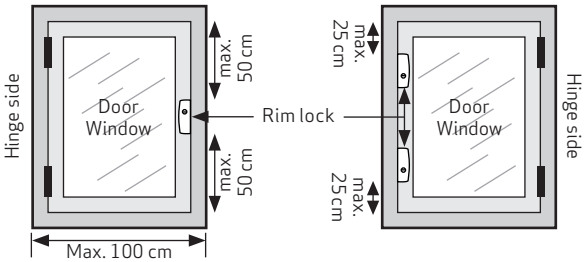

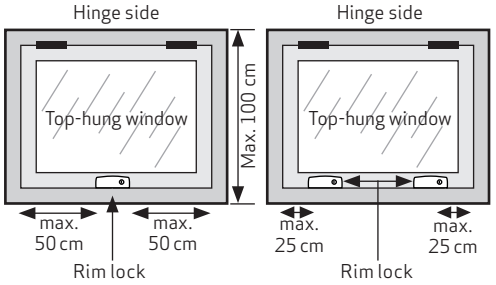

Minimum installation space required

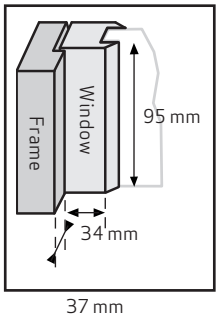

User manual

Open
Insert the key into the lock and turn it approximately 60° counter-clockwise and back again. The lock is now disengaged, and the window can be opened.

Close
When the window is closed, the lock will engage automatically. The key is not required for this.

Maintenance
Regularly (at least once a year) spray the cylinder and mechanism with lock spray.

37-251.2 (01-11)



AXA HOME/SECURITY

EN

Security rim lock 3016

SKG

POLITIE KEURMERK VEILIG WONEN


Installation manual

1 Remove the plastic cover from the rim lock.
2 Pull the window shut tightly.
3 Always place the 3016 on the side of the window opposite the hinges (figure **A**).
4 Mark the screw holes using the supplied drilling template.
5 Fasten the washer plate (UP must be legible) and the locking loop to the window using the screws (4.5 x 40 mm) in the specified order (figure **B**).


For a spruce (softwood) window, you should use 4.5 x 45 mm screws. However, check whether the window thickness allows for this.

6 Open the window.
7 Screw the spacer plate (UP must be legible) and the lock onto the frame using the screws (5.0 x 60 mm) (figure **C**).
8 Close the window.
9 Check if the rim lock works.
10 Remove the key from the rim lock and snap the plastic cover over the rim lock (figure **D**).


A

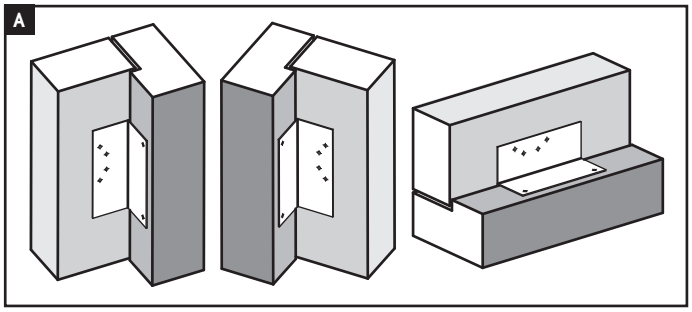

B

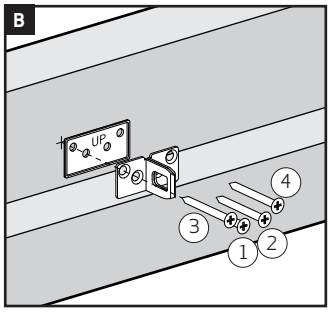

C

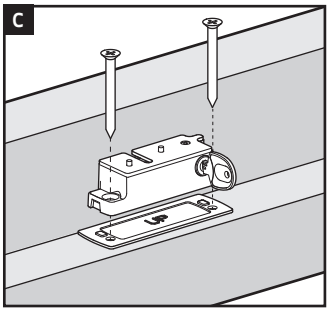

D

