37-243.2 (01-15)

Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com



AXA HOME/SECURITY

EN

SKG®

POLITIE KEURMERK VEILIG WONEN


Window fastener 3318*/ 3319 / 3320

with end hook

* Quality marks do not apply to window lock 3318.


Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

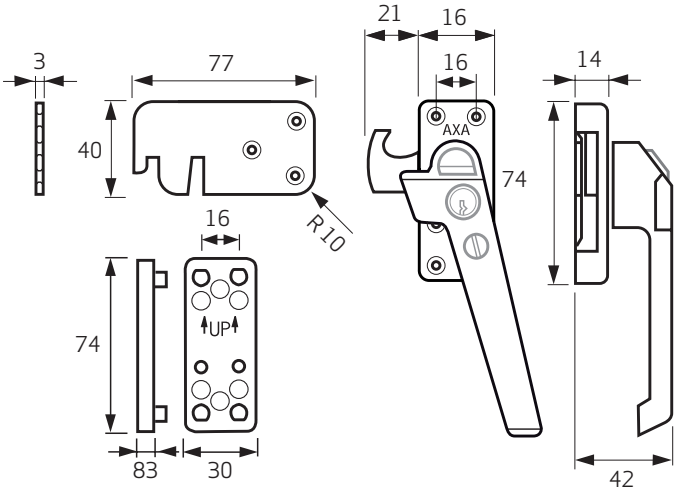


Screw thickness	Pre-drilling softwood	Pre-drilling hardwood
4,0 mm	Ø 2,5 mm	Ø 3,0 mm

Mounting position
left or right

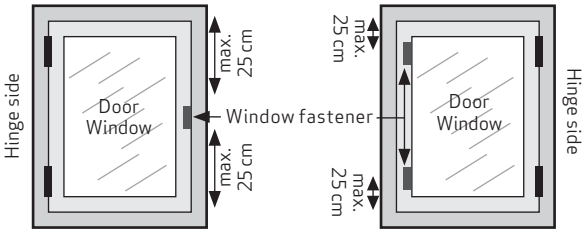

Minimum installation space required

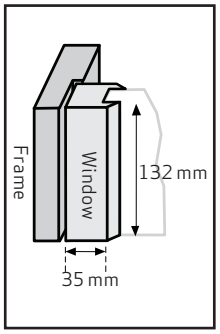

Application
Inward opening doors and windows

Installation tools (recommended)
Tape measure, (battery) drill, screwdriver, drill Ø 2,5 and/or 3 and 20 mm bradawl/pencil.

Recommended screws: 4,0 x 40 mm en 4,0 x 50 mm.

User manual

3318 **Open**
Press the push button (1), turn handle horizontally (2).


Close
Turn the handle vertically.


3319 **Open**
Unlock with the key (1), turn handle horizontally (2).


Close
Turn the handle vertically, lock with the key.

3320 **Open**
Unlock with the key (1),
press the push button (2), turn handle horizontally (3).

Close
Turn the handle vertically, lock with the key.

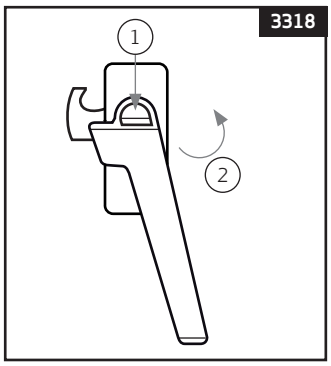

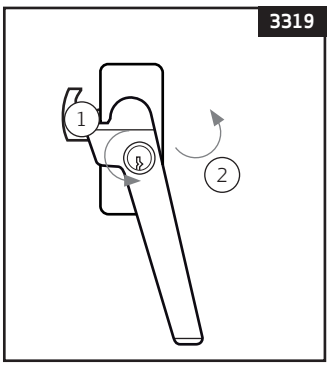

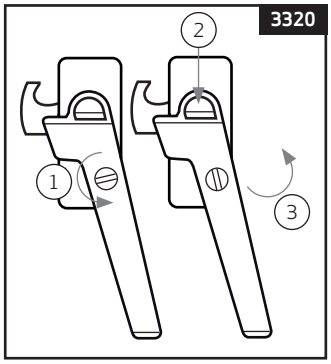

37-243.2 (01-15)



AXA HOME/SECURITY

EN

Window fastener 3318*/ 3319 / 3320

with end hook

SKG

POLITIE KEURMERK VEILIG WONEN

* Quality marks do not apply to window lock 3318.

Installation manual

Preparations

Decide whether you want to install the window lock with or without a washer plate (2).

Mounting with washer plate (figure B) when:
- there is a chance that the glass will be screwed on
- this is necessary for the distance to the strike plate

1 Decide at what height you want to fit the window fastener and mark the top of the fastener on the window (H).

2 Mark this height on the front and the inside of the window frame as well (H).

3A **Mounting end hook (3) in conjunction with a window fastener (1) *with* washer plate (2) (*figure* B).**
If the front edge of the window is flush with the frame, mark a distance (I) of 35.5 mm from the front edge of the frame. If the window or door is set back from the frame, add this difference to the 35.5 mm.

3B **Mounting end hook (3) in conjunction with a window fastener (1) *without* washer plate (2) (*figure* C).**
If the front edge of the window is flush with the frame, mark a distance (I) of 43.5 mm from the front edge of the frame. If the window or door is set back from the frame, add this difference to the 43.5 mm.

4 Hold the end hook against the marked lines (H) and (I) (figure A) on the window frame and trace around the latch with a pencil.

5 Cut away the marked-out wood to a depth of 3 mm. For the rounded corners, use a 20 mm drill bit.

6 Secure the end hook with 3 screws (5) (4,0 x 40 mm).

Mounting window fastener

7 Position the top of the window fastener at the marked height and hook it into the end hook.

8 Mark out the top and bottom screw holes.

9A ***With* washer plate (*figure* B):**
Position the washer plate (with the arrows and the text 'up' facing upwards) so that the holes (I) line up with the marked holes on the window fastener. Use the holes (I) en (II) (figure F). If there is a possibility that the glass will be screwed on, use the holes (II) and (IV) or (III) and (IV) (figure D).
Secure the washer plate with the screwsn (5) (4,0 x 40 mm).
Place the window fastener (1) on the washer plate (2) screw it in place with the 4 taptites (6), tightening the last few turns by hand.
Open the window fastener and screw the window fastener with 1 screw (5) (4,0 x 40 mm) in hole G.

9B ***Without* washer plate (*figure* C):**
Mount the window fastener (1) with screws 4,0 x 50 mm (not included) on the window.
Open the window fastener and screw the window fastener with 1 screw (5) (4,0 x 40 mm) in hole G.

