




Habilis Window stay

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

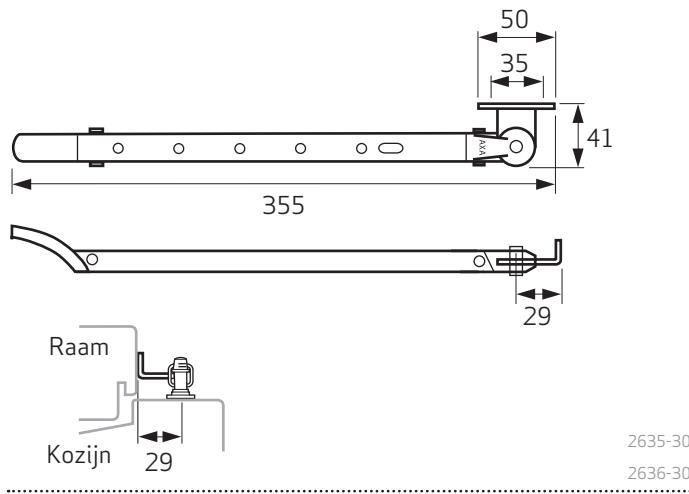

Application

Outward opening windows.


Installation tools (recommended)

Tape measure, (battery) drill, screwdriver, drill Ø 3 mm, bradawl/pencil.







Recommended fasteners: 4.0 x 30 mm

Mounting position

Left or right

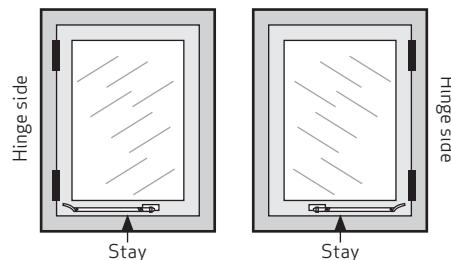

Minimum installation space required type 2635-30, 2635-31, 2635-32 en 2636-30

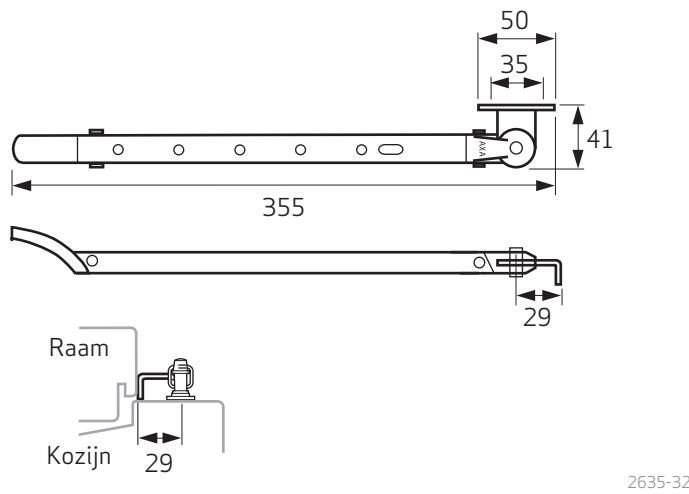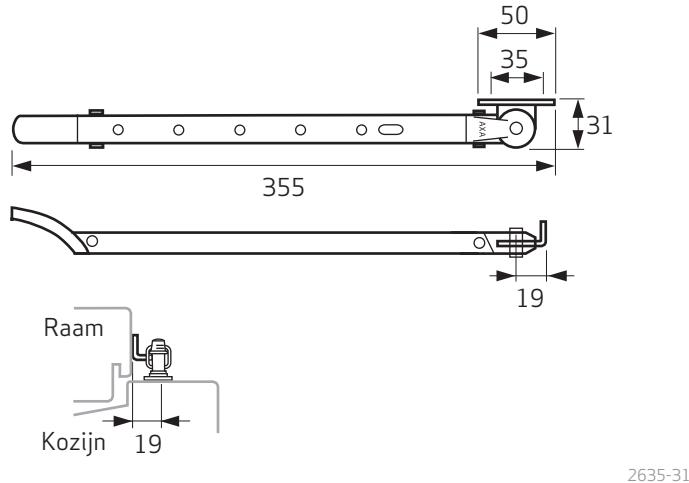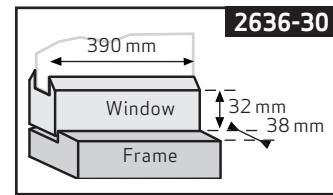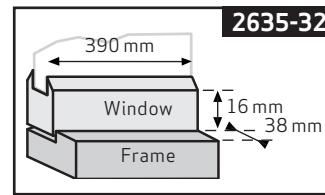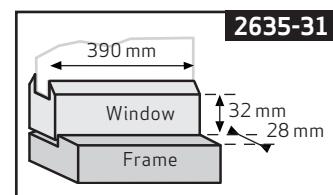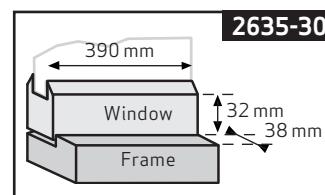



Habilis Window stay

User manual

Opening

Unlock the window. Lift the window stay handle. Push the window open and let the window stay fall into one of the 5 positions.

Ventilate

If you want a different position, release the handle and move the window.

Installation manual




The instructions below must be followed closely in order to effectively install and operate this product.

Mounting window bracket

- 1 Keep the window closed during installation of the window bracket.
- 2 Place the window stay 365 mm from the corner of the frame on the hinge side (figures **A** and **C**). Leave the window stay resting on the support in the middle of the slot hole (figure **B**). Ensure that the window stay is parallel to the window frame.
- 3 Mark the screw holes of the window bracket on the window.
- 4 Then screw the window stay onto the window (pre-drill Ø 3 mm).

Close

Lift the handle of the window stay, close the window and allow the window stay to fall over the pin in the slot hole. Lock the window.

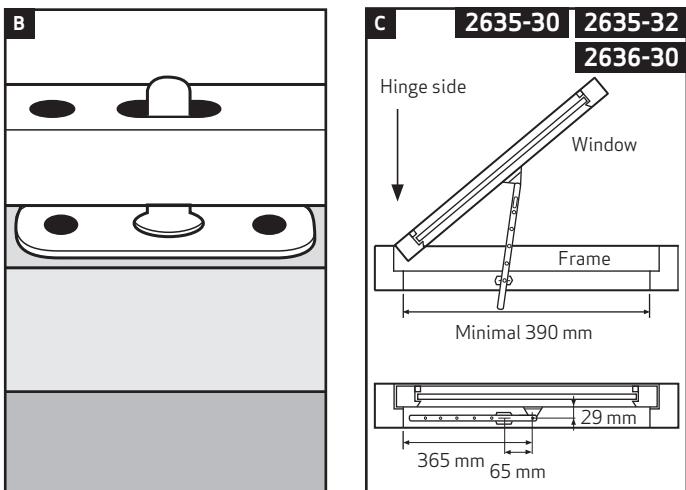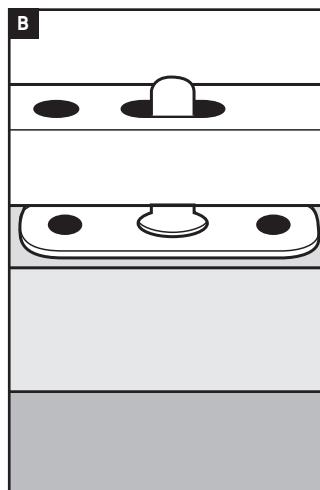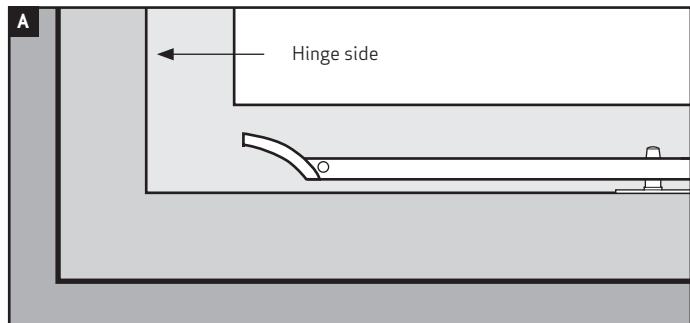

Mounting stay pin

- 5 Place the stay pin in the centre of the slot of the window stay, ensuring that the window stay is parallel to the window. (figures **C** and **D**).
- 6 Then lift the window stay and open the window. Make sure that the stay pin remains securely in place.
- 7 Mark the screw holes of stay pin on the frame.
- 8 Then screw the window stay onto the frame (pre-drill Ø 3 mm).

