


AXA HOME SECURITY

EN
SKG
**POLITIE
KEURMERK
VEILIG
WONEN**

Door security strip M3-EX

Outward opening doors and back doors

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

Use


Outward opening doors and back doors.

Installation tools (recommended):

Tape measure, (battery) drill, screwdriver, Ø 2.5 mm drill bit, hacksaw or grinder, hex key, pencil or bradawl.


Assembly location

Closing side of the door

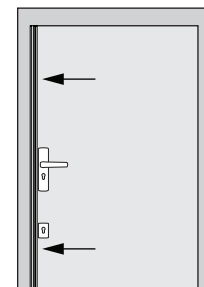

Table

Type	dimensions for door security strip in mm							
	X	B	b1	b2	H	h1	h2	S
M3-EX/0-4MM	0-4	41	21	16	23	10	14	6
M3-EX/5-9MM	5-9	41	21	16	28	10	14	6
M3-EX/10-14MM	10-14	46	21	16	33	10	14	6
M3-EX/15-19MM	15-19	46	21	16	38	10	14	6
M3-EX/20-25MM	20-25	46	21	16	43	10	14	6

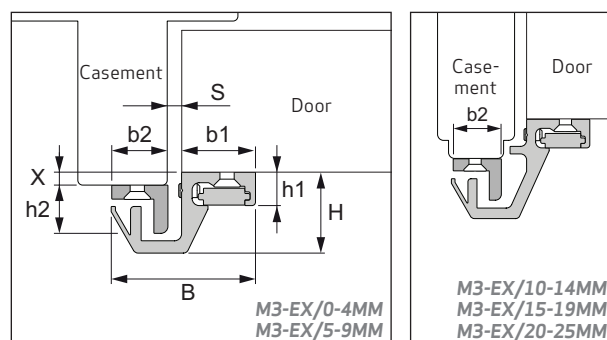

X = recess (difference between the front of the transom and the front of the door) / **B** = Total width / **b1** = min. mounting width of door profile / **b2** = width of transom profile / **H** = height of door profile / **h1** = height of door profile base / **h2** = height of transom profile / **S** = maximum jamb when closed

Installation manual

For problem-free operation of this product you must follow the instructions below carefully.

- 1 Dismount the finishing strip (1) from the door strip by unscrewing the 4 grub screws (2) (figure **F**).
- 2 Define the length of the door on the closing side. Shorten the strip sections to this length at the top using a hacksaw or grinder (figure **A**).
- 3 Position the door strip flush with the end of the door. Mark off one installation hole at each end and in the middle and pre-drill these (Ø 2.5 mm figure **B**).



Pre-drill carefully (note door thickness)
Do not drill through the lock case, no screws are required for this

- 4 Screw the door strip tight at these three points (4.0 x 40 mm figure **C**).
- 5 Position the frame strip on the transom flush with the end of the door strip. Mark off one installation hole at each end and in the middle and pre-drill these (Ø 2.5 mm figure **D**).
- 6 Tighten the frame strip at these three points. (4.0 x 40 mm **E**).
- 7 Check that the door works properly in combination with the door security strip. If the strip sections rub, the strip must be moved.
- 8 If it works properly, pre-drill the other holes in the strips (Ø 2.5 mm) and screw the door strip tight (4.0 x 40 mm).
- 9 Tilt the finishing strip (1) into the door strip. Then lock the locking strip by tightening the 4 grub screws (2) on the side (figure **F**).

