37-262.2 (03-13)

Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com



AXA HOME/SECURITY

EN


SKG®


POLITIE KEURMERK VEILIG WONEN


Security backplates and -rosettes Curve

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

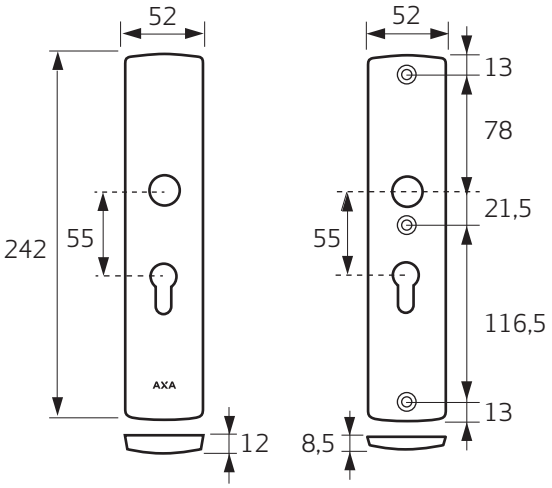

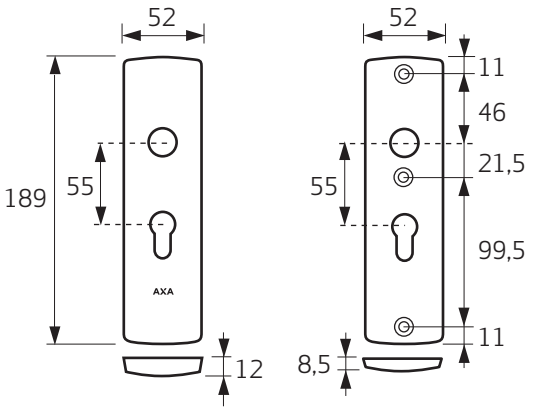

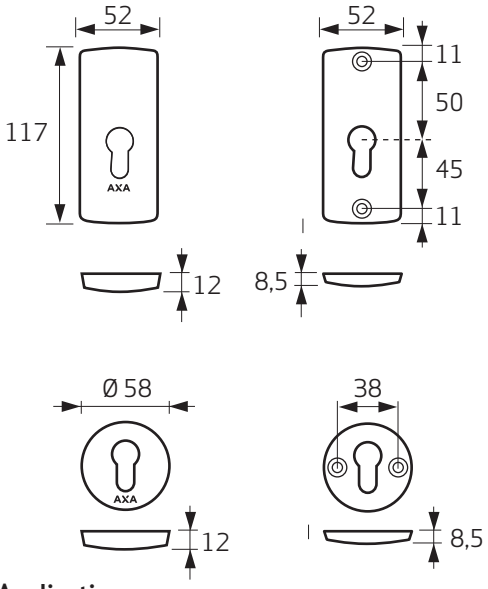

Application
Exterior doors

This product is suitable as standard for doors up to 40 mm thick.
For doors of other thicknesses, please contact your supplier or consult the website

To ensure optimum security for the premises, the profile cylinder must not protrude more than 3 mm beyond the outer plate.

Installation tools (recommended)
(Battery) drill, screwdriver, drill Ø 8 and Ø 13 mm, awl/pencil.

37-262.2 (03-13)



AXA HOME/SECURITY

EN

SKG®

POLITIE KEURMERK VEILIG WONEN

Security backplates and -rosettes Curve

Installation manual

1 Fit the lock and the profile cylinder (figure **A**).
2 Place the drill template over the cylinder (figure **B**).
3 Insert the spindle through the template via the handle hole in (applies only to security backplates).
4 Pierce through the drill marks with an awl.
5 Repeat steps **2**, **3** and **4** on the other side of the door.
6 Remove the drilling template and dismantle the cylinder and lock.
7 Drill through the markings on the outside with a Ø 13 mm drill bit to a depth of 15 mm. Then continue drilling with an Ø 8 mm drill bit until halfway through the door or the lock case.
8 Reattach the lock and profile cylinder to the door.
9 Place the outer backplate (1) on the door from the outside.
10 Secure the outer backplate (1) to the inner backplate (2) using the bolts provided (3) (figure **C**, **D**, **E** or **F**).

