Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com
37-271.2 (01-13)




AXA HOME SECURITY

EN


Klik Interior door backplates Curve

Information


You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

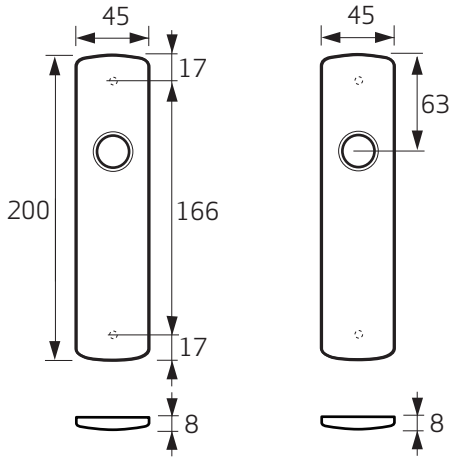


6210-50

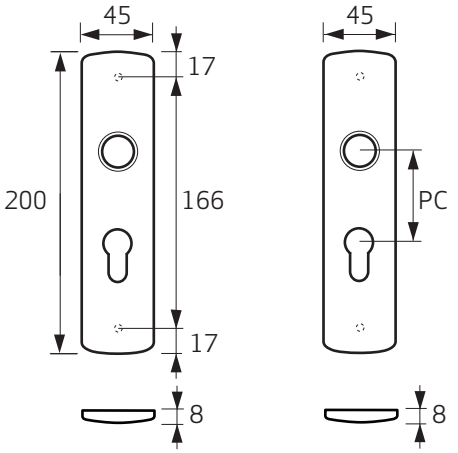

6210-20

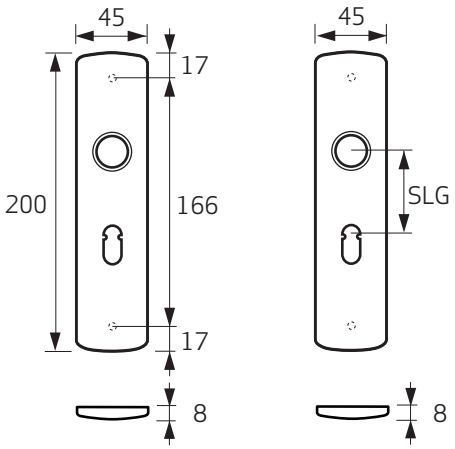

6210-30

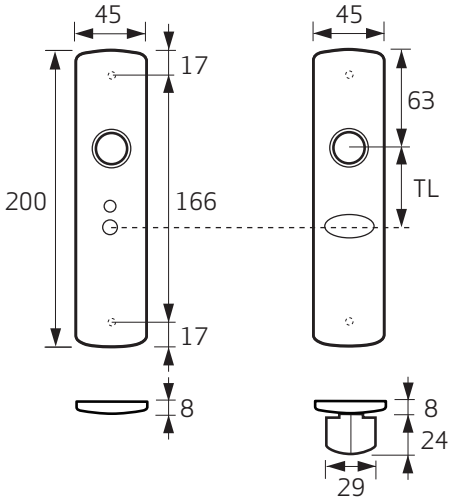

6210-45

Application
Interior doors

Installation tools (recommended)
Tape measure, (battery) drill, screwdriver, drill Ø 2,5 or 3 mm, bradawl/pencil.

Recommended fasteners: 4,0 x 20 mm

Screw thickness	Pre-drilling softwood	Pre-drilling hardwood
4,0 mm	Ø 2,5 mm	Ø 3,0 mm

37-271.2 (01-13)



AXA HOME/SECURITY

EN

Klik Interior door backplates Curve

Installation manual

Preparations
Fit the correct type of lock into the door and drill the holes for the handles and, if necessary, for the profile cylinder, key hole or toilet/bathroom lock pin

1A *Interior backplates Klik (non-lockable lock))*
Place the mounting plate (1) on the door and insert the handle (spindle part) (5) through the mounting plate into the lock (figure **A**). Place the other mounting plate on the other side of the door and slide the handle (female part) onto the spindle.


1B *Interior backplates Klik (PC, for profile cylinder lock)*
Place the mounting plate (1) on the door and insert the handle (spindle part) (5) through the mounting plate into the lock (figure **B**). Place the other mounting plate on the other side of the door and slide the handle (female part) onto the spindle. Place the element (2) at the correct height on both sides in the mounting plate.

1C *Interior backplates Klik (SL, for keyhole lock)*
Place the mounting plate (1) on the door and insert the handle (spindle part) (5) through the mounting plate into the lock (figure **C**). Place the other mounting plate on the other side of the door and slide the handle (female part) onto the spindle. Place the element (3) at the correct height on both sides in the mounting plate.

1D *Interior backplates Klik (TL, for toilet/bathroom lock)*
Place the mounting plate (1) on the door and insert the handle (spindle part) (5) through the mounting plate into the lock (figure **D**). Place the other mounting plate on the other side of the door and slide the handle (female part) onto the spindle. Place the toilet/bathroom free-occupied spindle (4) in the lock.


2 Keep the mounting plates vertical (for the keyhole version, insert the key) and mark out the screw holes.
3 Remove the handles.
4 Fit the mounting plates.
5 Fit the door backplates (6) on both sides of the mounting plates. For the toilet/bathroom lock, the control knob must be on the inside (figure **E**).
6 Fit the handles.

A

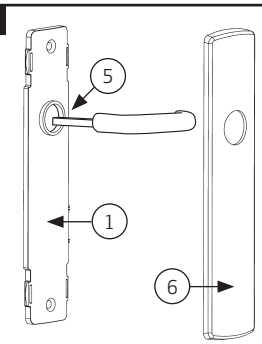


Non-lockable lock

B

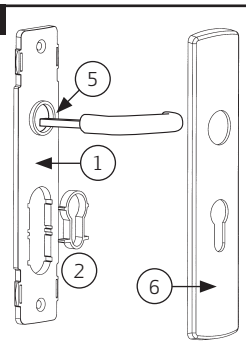


Profile cylinder lock (PC)

C

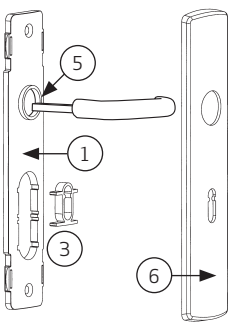


Keyhole lock (SL)

D

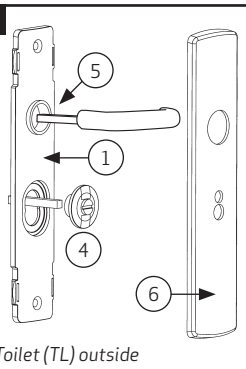

Toilet (TL) outside

E

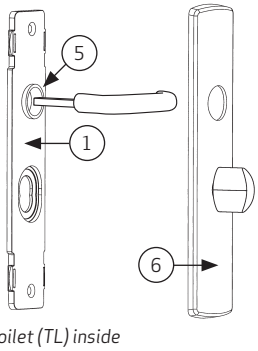

Toilet (TL) inside