73-020.2 (07-15)



AXA HOME/SECURITY

EN

Security combi-window fastener

Oyster


For casement windows that open outwards

SKG ★★ SKG

POLITIE KEURMERK VEILIG WONEN

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

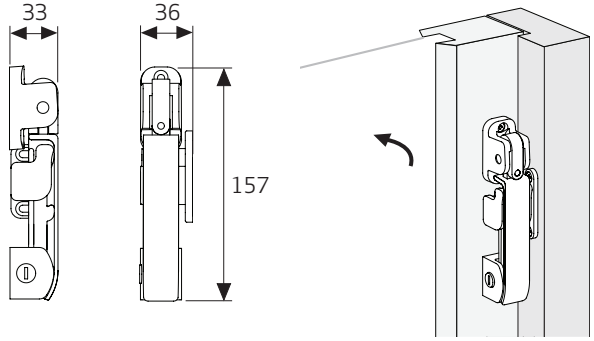


Use

For outward opening windows

Package contents

1. (1x) Window bracket
2. (1x) Frame bracket
3. (4x) 4.5 x 40 mm screws
4. (4x) 4.5 x 50 mm screws
5. (1x) Lock bracket (Combi C.)
6. (1x) Drill template

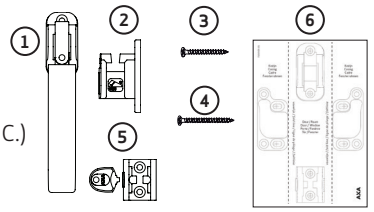


Installation tools (recommended):


(Battery) drill or screwing machine, flexible steel ruler, Ø 3 mm drill, adhesive tape, pencil or spike.

Installation position

Left or right

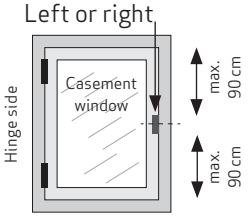

Minimum installation space required

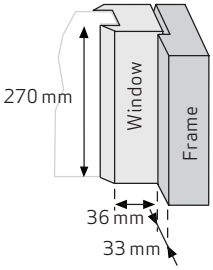

Assembly manual

1 Position the drill template (6) at the correct height with the fold line on the corner of the frame and the door/window. Tape the drilling template in place. Prick the drill markings (4x restrictor (I) and 2x extra drill markings for combi casement stay (II)) using an awl or a pencil and then pre-drill them (Ø 3 mm,figure **A**).


See illustration of installation position for the correct height.


2 Fix window bracket (1) and lock bracket (5) (locking version) with screws (3) (4.5 x 40 mm, figure **B**).


3 Fix frame bracket (3) with 2 screws (4) (4.5 x 50 mm, figure **C**) on the back slot position.


4 Fold the window bracket over the frame bracket and check the closing force (model with locking function). The locking force can be increased by sliding the installation plate farther away from the door/window and secure (figure **D**).


5 Pre-drill the two foremost hole positions of the frame bracket. Secure the frame bracket with two screws (4) (4.5 x 50 mm, figure **E**).

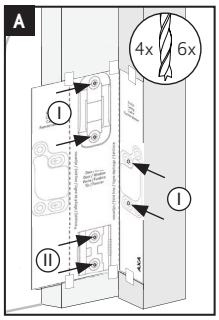


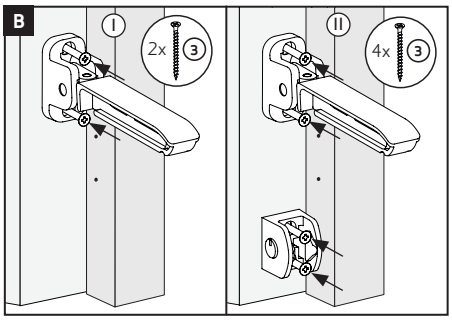

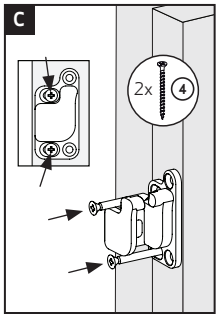

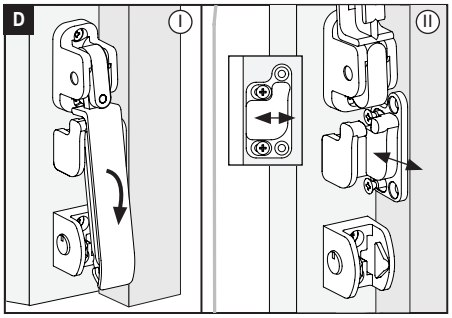

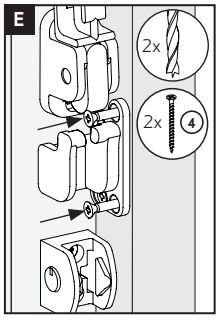

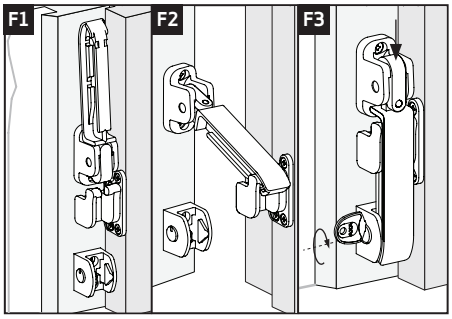

User manual

- Window open: fold window bracket upwards (figure **F1**)
- Window ajar: window bracket over frame bracket (figure **F2**)
- Window closed: push window bracket behind the locking bracket and turn the key in the lock by 180° (figure **F3**)