37-242.2 (03-15)

Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com



AXA HOME SECURITY

EN

SKG®

POLITIE KEURMERK VEILIG WONEN


Window fastener 3318*/ 3319 / 3320

with built-in striker

* Quality marks do not apply to window lock 3318.

Information


You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

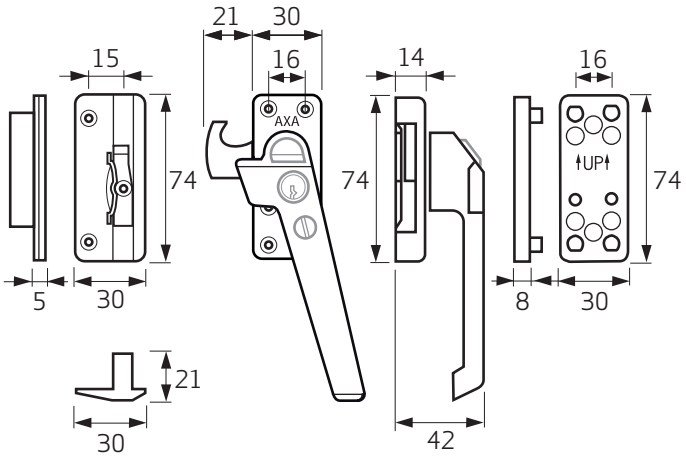


Screw thickness	Pre-drilling softwood	Pre-drilling hardwood
4,0 mm	Ø 2,5 mm	Ø 3,0 mm

Mounting position

left or right

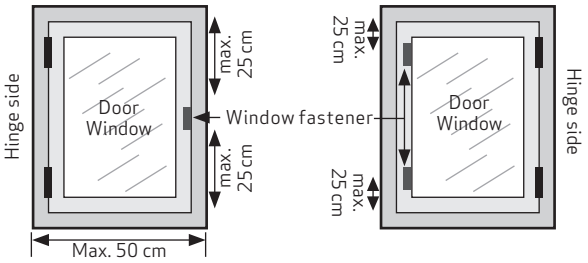

Minimum installation space required

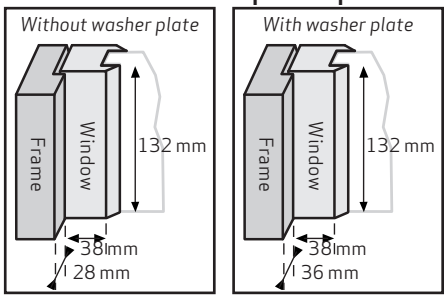

Application

Outward opening doors and windows

Installation tools (recommended)

Tape measure, (battery) drill, screwdriver, drill Ø 2,5 or 3 and 16 mm, hammer, bradawl/pencil.

Recommended screws: 4,0 x 40 mm of 4,0 x 50 mm

User manual

3318 **Open**

Press the push button (1), turn handle horizontally (2).

Close

Turn the handle vertically.

3319 **Open**

Unlock with the key (1), turn handle horizontally (2).

Close


Turn the handle vertically, lock with the key.


3320 **Open**


Unlock with the key (1),
press the push button (2), turn handle horizontally (3).

Close

Turn the handle vertically, lock with the key.

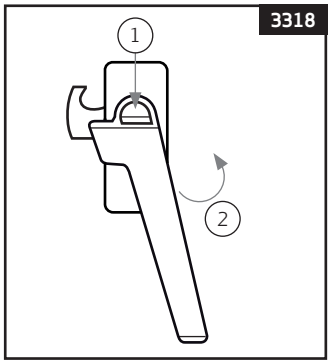

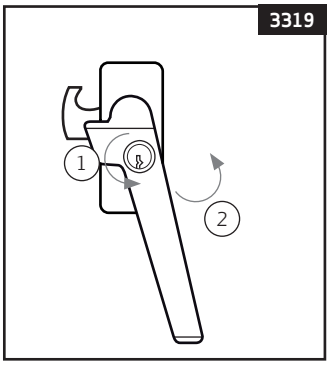

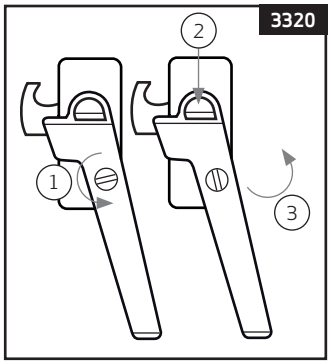

37-242.2 (03-15)



AXA HOME/SECURITY

EN

SKG®

POLITIE KEURMERK VEILIG WONEN

Window fastener 3318*/ 3319 / 3320

with built-in striker

* Quality marks do not apply to window lock 3318.

Installation manual

Preparations

Decide whether you want to install the window lock with or without a washer plate (2). Take the drilling template (8) and fold it along the fold lines (2x) towards the front. For installation with a backing plate, use drilling template 1.

Mounting with washer plate (figure A en C) when:
- there is a chance that the glass will be screwed on
- this is necessary for the distance to the strike plate
This is only possible with a minimum frame style width of 36 mm.

For installation **without** a washer plate (figure B) use drilling template 2.

1. Close the window and place plate 2 of the drilling template on the inside of the window in the position where you want to place the window fastener.
2. Make sure that for a left-hinged window (figure D) plane 3 is against the frame and for a right-hinged window (figure E) plane 1 is against the frame.
3. Mark the screw holes in plane 2 (window). At drilling template 1: Make use of the holes (II) and (III) (figure F). If there is a possibility that the glass will be screwed on, use the holes (II) and (IV) or (III) and (IV) (figure F).
4. Mark the screw holes in plane 1 and 3 (frame).

Mounting washer plate

Mount the washer plate (2) to the window using screws (5) (4,0 x 40 mm).


Mounting window fastener


5A ***With* washer plate** (figure A): Place the window fastener (1) on the washer plate (2) screw it in place with the 4 taptites (7) ((I) figure F), tightening the last few turns by hand. Open the window fastener and screw the window fastener in place with screw (5) in hole G.


5B ***Without* washer plate** (figure B): Mount the window fastener with 4 screws 4,0 x 50 mm (not included) on the window. Open the window fastener and screw the window fastener in place with screw (5) in hole G.


Mounting striker


6. Using a 16 mm drill bit, drill four holes (18 mm deep, excluding the drill bit tip) at the pre-marked points on the window frame.
7. Using a chisel, turn the four drill holes into a single slot in the window frame.
8. Secure the striker (3) with screws (5) (4,0 x 40 mm).

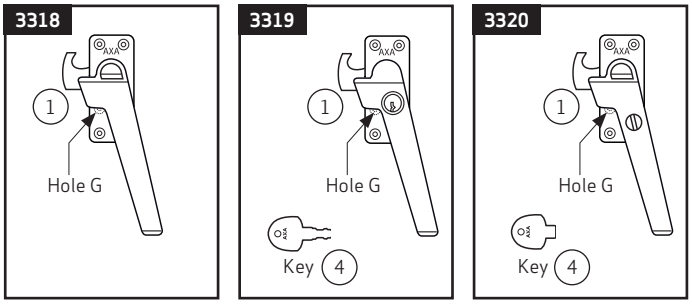


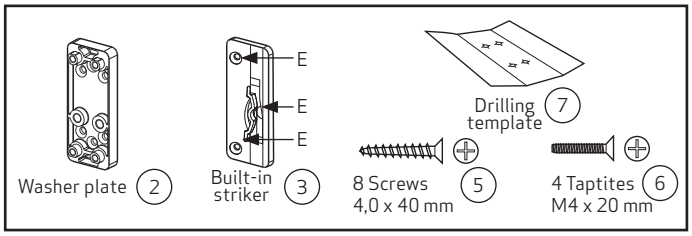

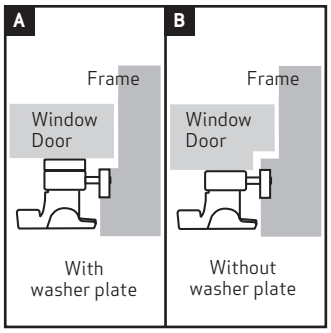

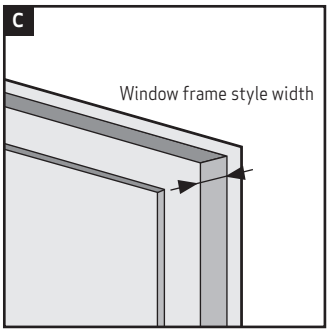

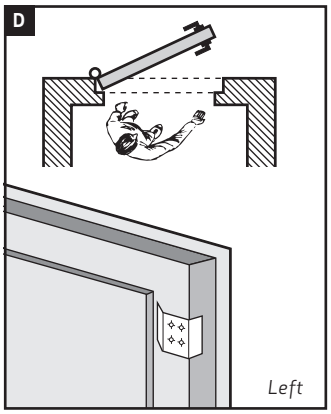

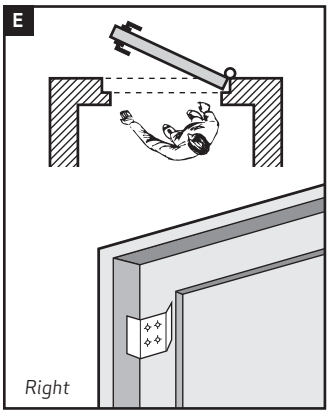

Install additional locks on one door.

Please note that when installing window fasteners on a door for extra security or to prevent the door from warping, you must install the window fasteners with the handle facing upwards ("upside down") on the door. This prevents a pet or small child from accidentally closing the window fastener when you are outside and the door is closed, making it impossible to open the door from the outside.

