37-222.2 (5-25)

Allegion NL B.V. - Energiestraat 2 - 3903 AV Veenendaal - Nederland - info.axa.home@allegion.com - axahomesecurity.com




AXA HOME SECURITY

EN


AXAflex Combi window stay

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

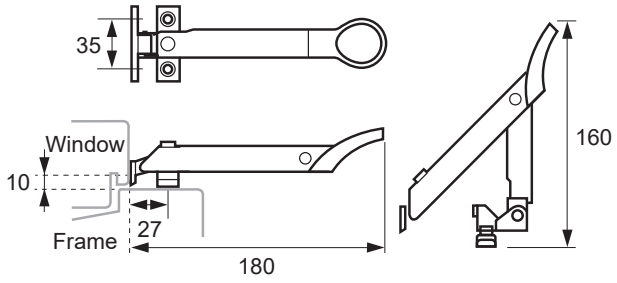

2640-10

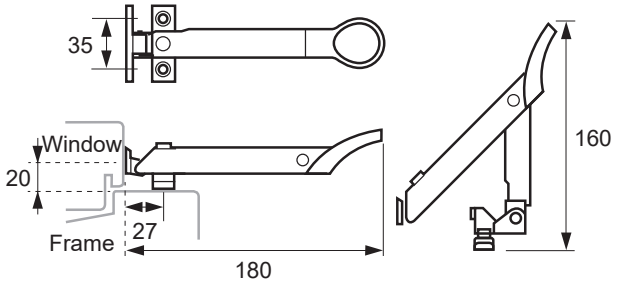

2640-20


Application
Outward opening top-hung windows.

Installation tools (recommended)
Tape measure, (battery) drill, screwdriver, drill Ø 3 mm, bradawl/pencil.


Recommended screws: 4,0 x 30 mm

Screw thickness	Pre-drilling softwood	Pre-drilling hardwood
4,0 mm	Ø 2,5 mm	Ø 3,0 mm

Mounting position

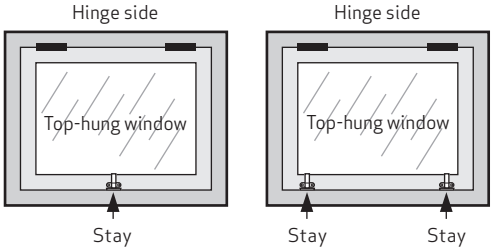

Minimum installation space required

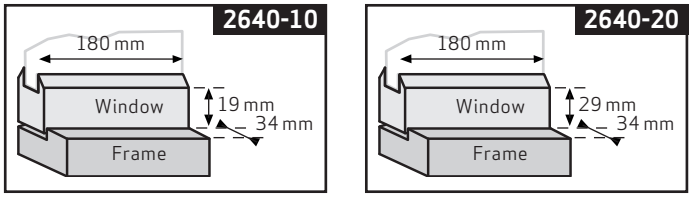

User manual

Open
Turn the AXAflex at right angles to the window. Pull the AXAflex upwards by the pull eye and open the window.

Ventilate
The Axaflex has a fixed ventilation position. When opening the window, you will feel a click in a certain position. In this position, the window is fixed and a good ventilation flow is created. Curtains and blinds can move freely.

Extreme position
After pressing through from this ventilation position, the window is fully open.

Close
Pull the AXAflex with the pull eye inwards until the window is completely closed. Turn the AXAflex to the right.

37-222.2 (5-25)



AXA HOME/SECURITY

EN

AXAflex Combi window stay

Installation manual

The instructions below must be followed closely in order to effectively install and operate this product.

1. Keep the window closed during installation.
2. Place the AXAflex on the frame and against the window.
3. Mark the screw holes of the window plate on the window.
4. Screw the window plate in place(pre-drill Ø 3 mm, figure **A**).
5. Use the AXAflex to pull the window firmly against the draft profile.
6. Mark the screw holes of the window frame plate on the frame.
7. Screw the frame plate in place (pre-drill Ø 3 mm, figure **B**).

