



# AXA HOME SECURITY


## Security cylinders

EN



## Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.

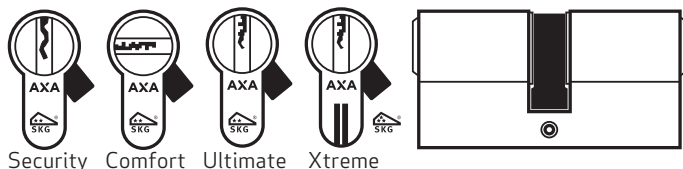

**Application**  
Door locks

### Installation tools (recommended)

Screwdriver  
Recommended bolt: bolt M5 x 70 mm

### Maintenance

Regularly (at least 1x per year) spray the cylinder and mechanics with AXA lock spray



**For Ultimate and Xtreme Security models, keep the key card supplied for reordering!**

## Installation manual

For problem-free operation of this product you must follow the instructions below carefully.

- 1 Remove the old profile cylinder and both escutcheon plates.
- 2 Put the key into the profile cylinder.
- 3 Turn the key +/- 15° to the left or right, so that the black carrier lies in line with the rest of the cylinder (figure **A**).
- 4 Place the profile cylinder in the lock so that both sides protrude by roughly the same amount and turn the key back to the original position (figure **B**).



**If the cylinder is extended, make sure that you put the extended part on the correct side.**

- 5 Remove the key from the lock and loosely attach the profile cylinder using the supplied cylinder bolt (figure **C**).
- 6 Fix both escutcheon plates.



**Remember to use approved security escutcheon plates for optimal burglar resistance. The profile cylinder may protrude from the escutcheon plate by no more than 3 mm and fall no more than 2 mm inside the escutcheon plate.**




- 7 Now tighten the cylinder bolt.



**When using an electric screwdriver to tighten the screws, make the last turn by hand.**

### Tips

- Never leave the key in the cylinder, not only for obvious security reasons, but also because it hampers the use of a key from the other side (e.g. in an emergency situation). Only models with a panic function allow the key to be used on the outside even with a second key in the inside of the cylinder.
- Never use the key to pull or push the door.
- Always use security fittings with cylinder core protection for security cylinders with SGK\*\* or less, standard security fittings are sufficient for security cylinders with SGK\*\*\*.

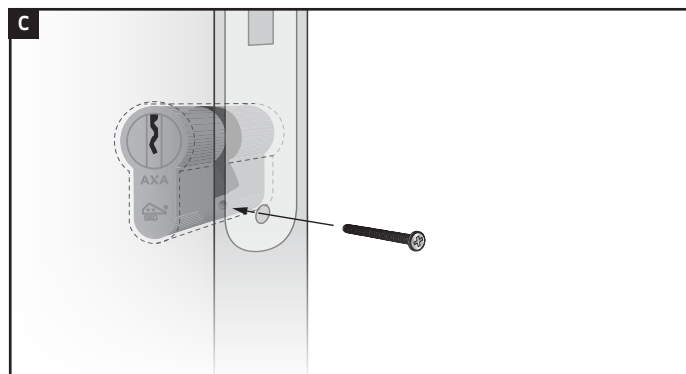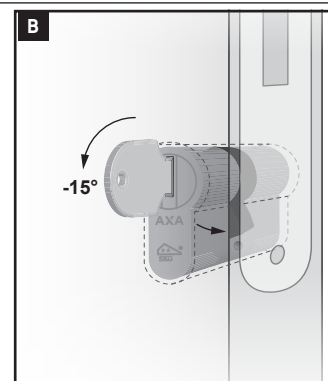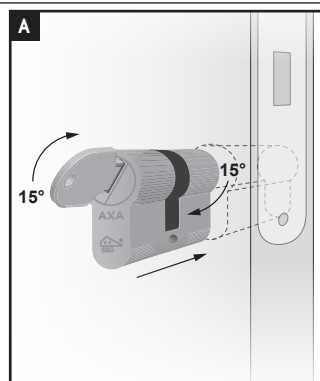

- Keep the key number and/or Security Card in a secure and private place. If the key or the Security Card goes missing, We advise you to replace the cylinder(s) and key(s) immediately in order avoid security risks.

The cylinder bolt is suitable for keys with a backset of 50 mm.  
For locks with a larger backset:  
length of attachment bolt = backset + 10 mm.