73.011.2(2-17)

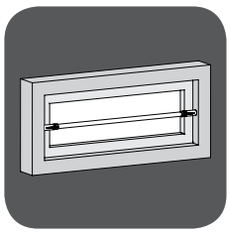

AXA HOME/SECURITY

EN

Barrier bar V1

Installation in the opening

Information

You have just acquired a high quality AXA product. The instructions below must be followed closely in order to effectively install and operate this product.



Application
Outward opening awning and top-hung windows.

Installation tools (recommended):
Tape measure, (battery) drill, screwdriver,
Ø 8 mm drill bit, hacksaw or grinder, pencil or bradawl,
2.5 mm hex key.

Installation location
Horizontally in the opening

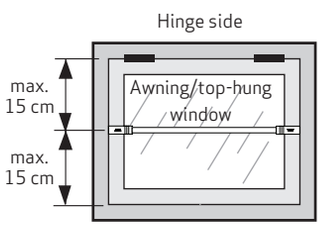

Minimum required installation space

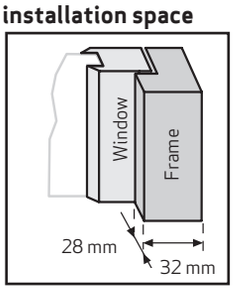

Installation manual

For problem-free operation of this product you must follow the instructions below carefully.

1 Determine the height of the barrier bar. Mark off the drill holes left and right on the window casing using a pencil or bradawl. Ensure that the centre line of the borehole is at least 14 mm from the front of the window casing. Then drill two holes approx. 25 mm deep (Ø 8 mm, figure **A**).

The distance between the window casing and the barrier bar may be no more than 15 cm. If required, several barrier bars can be installed one above the other.

2 Using a hammer, knock an installation plug into each hole (figure **B**).
3 Determine the distance between the plugs and shorten the bar with a hacksaw or grinder (figure **C**).
4 Slide a cap over both ends of the bar and place the bar between the installation plugs (figure **D**).
5 Slide the caps over the installation plugs and tighten both adjusting screws using a hex key (Ø 2,5 mm), thus locking the caps in place (figure **E**).
6 After installation, fill the hex heads with steel putty or break the hex head with a drill, so that it can no longer be removed (figure **F**).

